

 
Congratulations on your purchase of this high-quality Dynex product. Your DX-D7PDVD or DX-D9PDVD represents the state of the art in personal DVD player design and is designed for reliable and trouble-free performance.

Package contents

- 7" or 9" main DVD player
- 7" or 9" LCD monitor
- AV cable (for TV)
- AC adapter
- Vehicle charger
- AV/DC cable (for connection between the 2 screens)
- Headphones (2)
- Headrest mount (2)
- Carry bag
- Quick Setup Guide

Before using your new product, please read these instructions to prevent any damage.


Player navigation controls

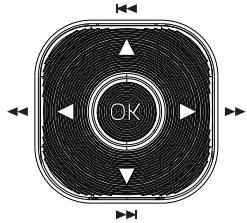

CONTROL	DESCRIPTION
▲/◀◀	In Menu mode, press to move up in a list or menu. In playback mode, press to go to the previous title, chapter, or track.
▼/▶▶	In Menu mode, press to move down in a list or menu. In playback mode, press to go to the next title, chapter, or track.
◀/◀◀	In Menu mode, press to move left. In playback mode, press to fast reverse the playback.
▶/▶▶	In Menu mode, press to move right. In playback mode, press to fast forward the playback.
OK	In menu mode, press to confirm a selection.


Features

 DVD player (both 7" and 9")

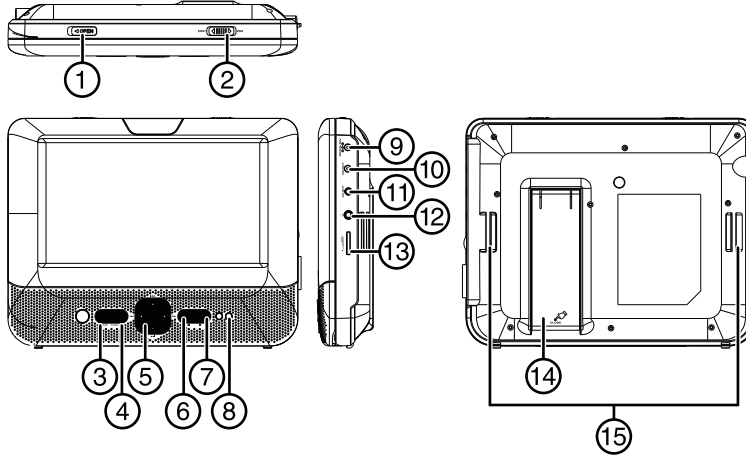


#	COMPONENT	DESCRIPTION
1	OPEN switch	Slide to open the disc tray.
2	ON/OFF switch	Slide to turn your DVD player on or off.
3	SETUP button	Press to open or close the setup menu.
4	FUNC. button	Press to enter or exit the virtual remote control.
5	Navigation controls	See "Player navigation controls".
6	▶ button	Press to pause or resume the playback.
7	■ button	Press to stop disc playback.
8	Power indicator	Lights when your player is turned on.
9	DC IN jack	Connect to an AC adapter or vehicle charger.
10	DC OUT jack	Connect the LCD monitor to this jack using the AV/DC cable.
11	AV OUT jack	Connect the LCD monitor to this jack using the AV/DC cable. Or connect a remote monitor, TV, or amplifier to this jack using the AV cable and an RCA cable (not supplied).
12	Headphone jack	Plug headphones into this jack. Note: When headphones are plugged in, the internal speakers are muted.
13	Volume control	Rotate this dial to adjust the volume.
14	Stand	Pull out to set your player on a desk or table.
15	Strap slots	Slide mounting straps through the slot when installing player in a vehicle.

 7" monitor

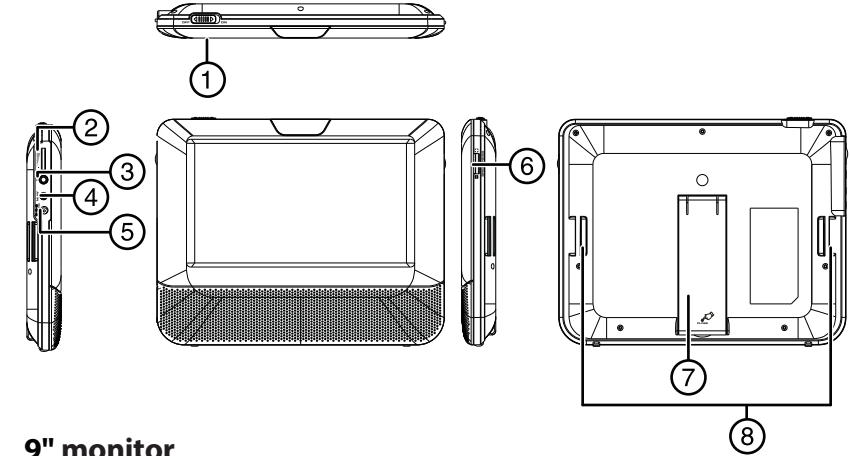

9" monitor

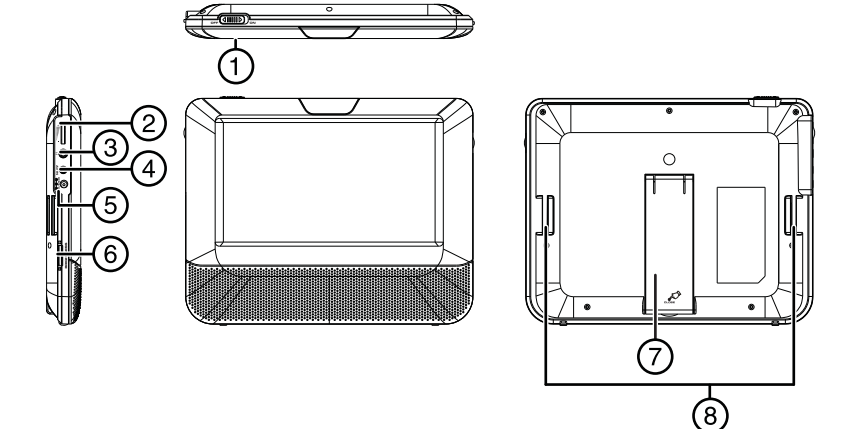 


#	COMPONENT	DESCRIPTION
1	ON/OFF switch	Slide to turn your DVD player on or off.
2	Volume control	Rotate this dial to adjust the volume.
3	Headphone jack	Plug headphones into this jack. Note: When headphones are plugged in, the internal speakers are muted.
4	AV IN jack	Connect the AV OUT jack on your DVD player to this jack using the AV/DC cable.
5	DC IN jack	Connect the DC OUT jack on your DVD player to this jack using the AV/DC cable.
6	BRIGHTNESS +/-	Rotate this dial to adjust the brightness of the display.
7	Stand	Pull out to set your player on a desk or table.
8	Strap slots	Slide mounting straps through the slot when installing player in a vehicle.

Setting up your player


To install your player in a vehicle

 - 1 Loosen the straps of the mounting plate as shown below, fit the DVD player or monitor to the mount in "front" position.
- 2 Slide the horizontal straps A and B through the slots on the back of the DVD player or monitor, then fold and secure them on to the back of the mounting plate until the Velcro attaches.
- 3 Bring straps C1, C2, D1, and D2 in front of the DVD player or monitor and attach to the Velcro as shown.
- 4 Fit the straps E1, E2, F1, and F2 around the headrest and secure the two buckles. Pull the straps tight as shown.

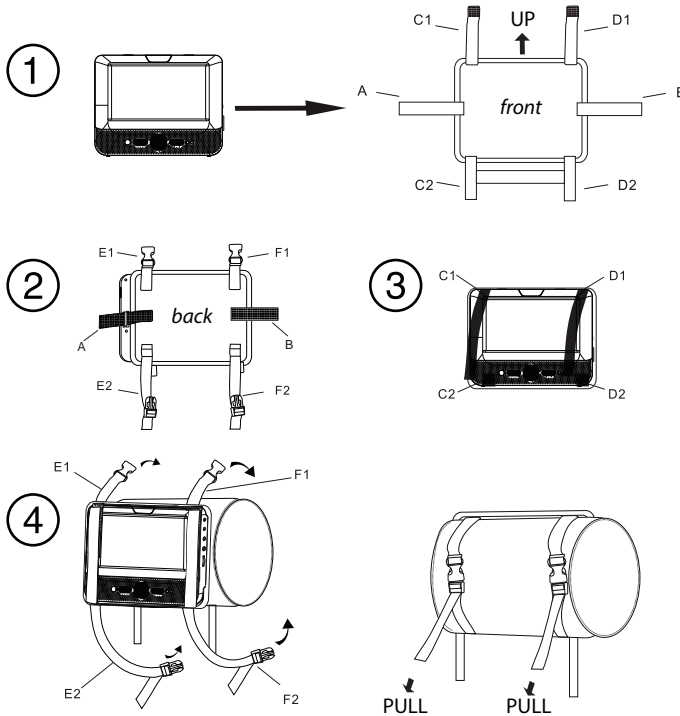


To connect to a 12V car power outlet

 - 1 Plug one end of the vehicle charger into the **DC IN** jack on the side of your player.
- 2 Plug the other end of the adapter into a 12V vehicle power outlet or vehicle cigarette lighter socket.
- 3 Using the AV/DC cable, connect **AV OUT** and **DC OUT** on the DVD player to **AV IN** and **DC IN** on the extra monitor.
- 4 Turn on your player.

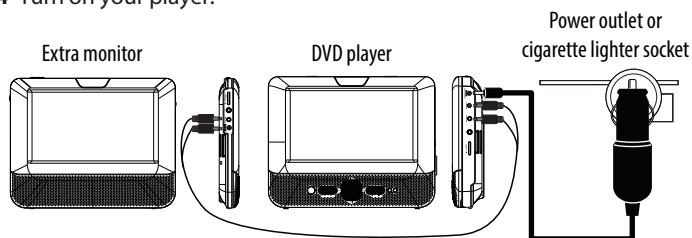

To connect to AC power

 
- Plug one end of the AC adapter into the **DC IN** jack on the side of your player, and the other end into an AC outlet.

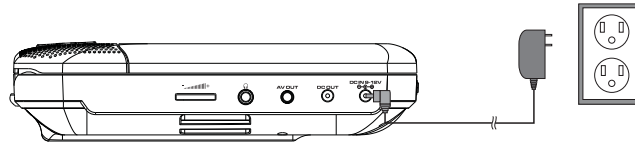

Connecting to a TV or monitor

You can connect your DVD player to a TV or monitor so you can watch DVDs on the TV or monitor.

 - 1 Plug the end of the supplied AV cable that has one black connector into the **AV OUT** jack on your DVD player.
- 2 Plug the connectors on an RCA cable (not included) into the connectors on the other end of the supplied AV cable. Make sure that the colors on the connectors match.
- 3 Plug the other end of the RCA cable into the AV jacks on the TV or monitor. The white connector goes into the left audio jack. The red connector goes into the right audio jack. The yellow connector goes into the video jack.

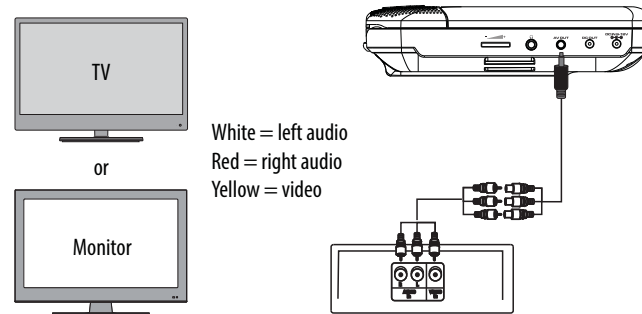

Using your DVD player

Playing a DVD or audio CD

Note: Most DVDs and your DVD player have region codes that help control illegal distribution of DVDs. The region code for your player is **1**. You can only play DVDs with a region code of **1** or **ALL**. The region code for a DVD is printed on the DVD or the DVD packaging.

- 1 Make sure that your player is connected to power.
- 2 Slide the **ON/OFF** switch to the **ON** position.
- 3 Slide the **OPEN** switch. The disc tray opens.
- 4 Place a disc, label side up, in the disc tray, then close the tray. The disc starts playing automatically.

Legal notices

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

CAN ICES-3 (B)/NMB-3 (B)

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

"Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

"Cet équipement est conforme à l'exposition aux rayonnements IC limités établies pour un environnement non contrôlé."

Important safety instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. The wide blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14 To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and no objects filled with liquids, such as vases, shall be placed on it.
- 15 The wall plug is the disconnecting device. The plug must remain readily operable.

90-day limited warranty

Visit www.dynexproducts.com for details.

Contact Dynex:

For customer service, call 800-305-2204

www.dynexproducts.com

DYNEX is a registered trademark of BBY Solutions, Inc. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2013 BBY Solutions, Inc. All Rights Reserved.